




INSTALLATION INSTRUCTIONS FOR KRONE[®] HIGHBAND 8/16, 2 OR 4 PAIR PATCH PLUG SET
PRODUCT No. 6451 2 040-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

NOTE: ALL 4 PAIRS ARE CONNECTED AND THIS PLUG CAN BE USED FOR 2 PAIR PATCHING WITH HIGHBAND 8 DISCONNECTION MODULES OR 4 PAIR PATCHING WITH HIGHBAND 16 SWITCHING (DOUBLE DENSITY) MODULES

CABLE ASSEMBLY DETAIL

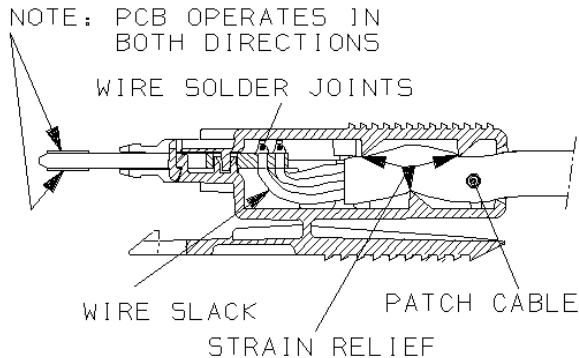

1. USING 4 PAIR CATEGORY 5 CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
2. SOLDER WIRES TO THE PCB AS REQUIRED ENSURING THE SOLDER SIDE IS THE ONE MARKED TOP.
3. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
4. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 040-00EB

Issue: 4

Sheet 1 of 1




INSTALLATION INSTRUCTIONS FOR KRONE[®] HIGHBAND 8/16, 2 OR 4 PAIR PATCH PLUG SET
PRODUCT No. 6451 2 040-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

NOTE: ALL 4 PAIRS ARE CONNECTED AND THIS PLUG CAN BE USED FOR 2 PAIR PATCHING WITH HIGHBAND 8 DISCONNECTION MODULES OR 4 PAIR PATCHING WITH HIGHBAND 16 SWITCHING (DOUBLE DENSITY) MODULES

CABLE ASSEMBLY DETAIL

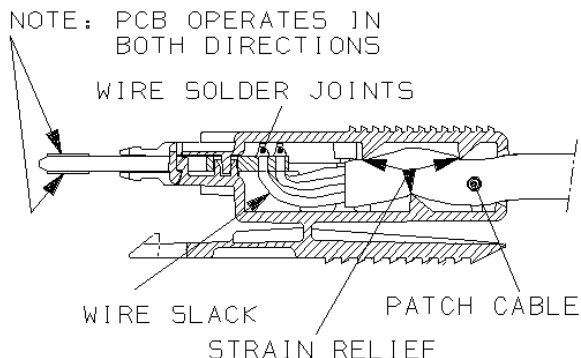

1. USING 4 PAIR CATEGORY 5 CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
2. SOLDER WIRES TO THE PCB AS REQUIRED ENSURING THE SOLDER SIDE IS THE ONE MARKED TOP.
3. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
4. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 040-00EB

Issue: 4

Sheet 1 of 1