

KM8 HAND TOOL Proposed Bag Print Details

Refer to KM8 jack installation instructions for preparation requirement before use of Termination Tool. Detailed installation instructions are available from your local KRONE supplier

Notes:

- Illustrations to be supplied and approved (packaging manufacturer to supply).
- Text/Contents to be approved by marketing.
- Language/translation requirements to be confirmed by marketing.
- KGmbH to upissue KM8 Jack packaging to include references to KM8 tool.
- Packaging to include KRONE logo and product name


METHOD 1 Cable Sheath O/D <8mm



1b
IMAGE SHOWING
KM8 UTP JACK
(with cover being
assembled)

METHOD 2 Cable Sheath O/D >8mm.

1a
IMAGE
SHOWING KM8
UTP JACK AND
COVER (before
termination)

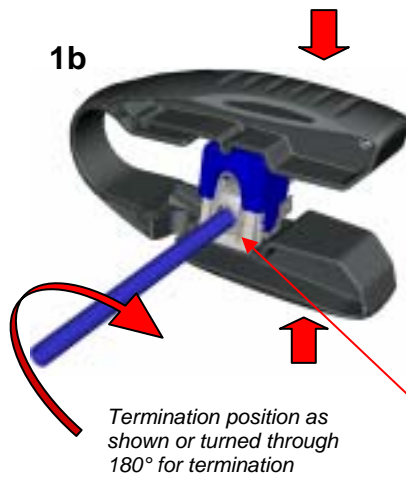

2 FTP/STP

IMAGE SHOWING
SHIELDED CLIP
ASSEMBLY (as per
current KM8 bag)

IMAGE SHOWING
DISSASSEMBLY OF
COVER (as per
current KM8 bag).

3 For special applications:

To remove connector clip insert small screw driver

NB: This image to show original KM8 not automated version.