




INSTALLATION INSTRUCTIONS FOR KRONE® HIGHBAND 1 PAIR TEST PLUG SET
PRODUCT No. 6451 2 055-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

CABLE ASSEMBLY DETAIL

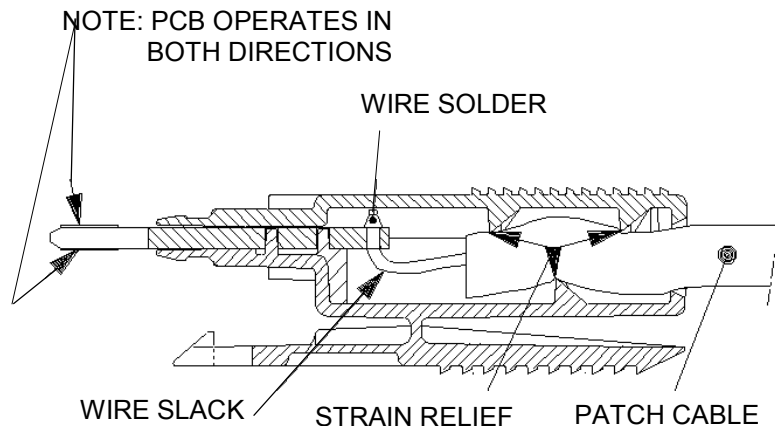

1. USING 4 PAIR CATEGORY 5 CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
2. SOLDER WIRES TO THE PCB AS REQUIRED.
3. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
4. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 055-00EB

Issue: 5


Sheet 1 of 1



INSTALLATION INSTRUCTIONS FOR KRONE® HIGHBAND 1 PAIR TEST PLUG SET
PRODUCT No. 6451 2 055-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

CABLE ASSEMBLY DETAIL

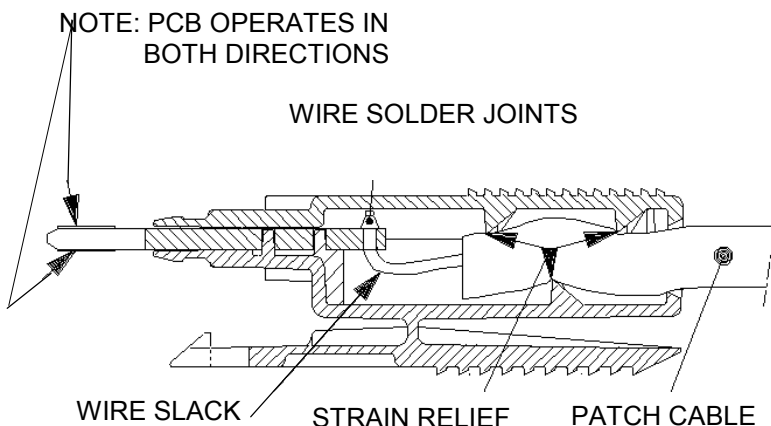

5. USING 4 PAIR CATEGORY 5 CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
6. SOLDER WIRES TO THE PCB AS REQUIRED.
7. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
8. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 055-00EB

Issue: 5

Sheet 1 of 1