




INSTALLATION INSTRUCTIONS FOR KRONE[®] HIGHBAND 1 OR 2 PAIR PLUG SET
PRODUCT No. 6451 2 045-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

NOTE: BOTH PAIRS CAN BE CONNECTED AND THIS PLUG CAN BE USED FOR 1 PAIR PATCHING WITH HIGHBAND 8 AND 10 DISCONNECTION MODULES OR 2 PAIR PATCHING WITH HIGHBAND 16 AND 20 SWITCHING (DOUBLE DENSITY) MODULES.

CABLE ASSEMBLY DETAIL

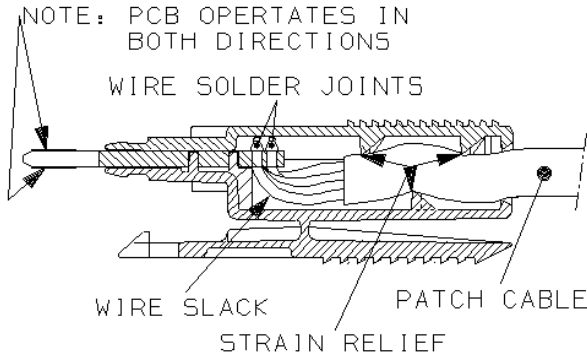

1. USING 4 PAIR CATEGORY 5e CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
2. SOLDER WIRES TO THE PCB AS REQUIRED ENSURING THE SOLDER SIDE IS THE ONE MARKED TOP.
3. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
4. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 045-00EB

Issue: 3

Sheet 1 of 1




INSTALLATION INSTRUCTIONS FOR KRONE[®] HIGHBAND 1 OR 2 PAIR PLUG SET
PRODUCT No. 6451 2 045-00

PLEASE READ INSTRUCTIONS BEFORE INSTALLATION

NOTE: BOTH PAIRS CAN BE CONNECTED AND THIS PLUG CAN BE USED FOR 1 PAIR PATCHING WITH HIGHBAND 8 AND 10 DISCONNECTION MODULES OR 2 PAIR PATCHING WITH HIGHBAND 16 AND 20 SWITCHING (DOUBLE DENSITY) MODULES.

CABLE ASSEMBLY DETAIL

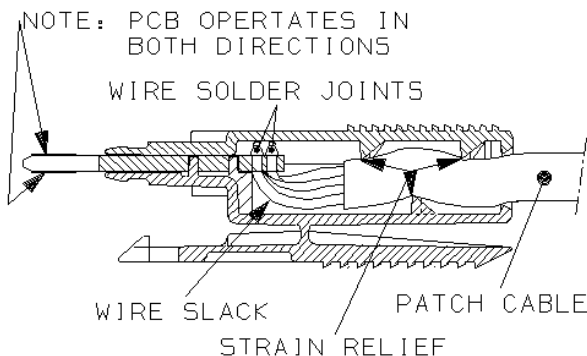

1. USING 4 PAIR CATEGORY 5e CABLE STRIP SHEATH 15mm MAXIMUM, THEN STRIP EACH INDIVIDUAL WIRE 3mm.
2. SOLDER WIRES TO THE PCB AS REQUIRED ENSURING THE SOLDER SIDE IS THE ONE MARKED TOP.
3. PLACE CABLE/PCB ASSEMBLY INTO LOWER SHELL PUSHING SHEATH CLOSE TO PCB EDGE TO LEAVE SLACK IN WIRES AS SHOWN, (ENSURING LOCATING PEGS ON LOWER SHELL ARE INSERTED FULLY INTO THE PCB).
4. FIT THE UPPER SHELL TO THIS ASSEMBLY AND PUSH UNTIL SHELLS CLIP FULLY TOGETHER.

Part No: 6451 2 045-00EB

Issue: 3

Sheet 1 of 1